



NEW CONSTRUCTION AND REMODEL APPLICATIONS

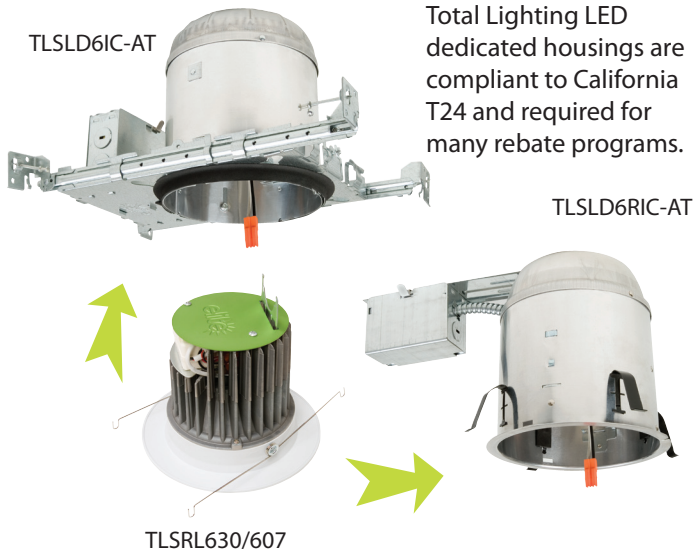

TOOL-LESS INSTALLATION IN NEW CONSTRUCTION AND REMODEL APPLICATIONS

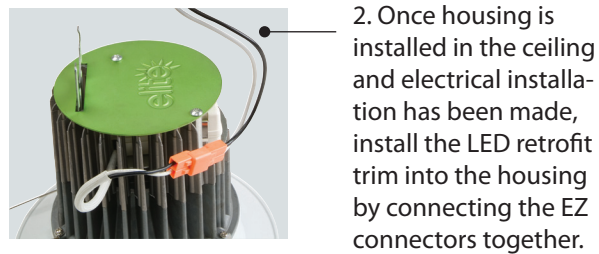

3. Install torsion spring in housing (5" & 6" models) and push LED retrofit trim up to the ceiling.



AVAILABLE IN 2", 3", 4", 5" & 6" SIZES.

RETROFIT APPLICATIONS



TOOL-LESS INSTALLATION



2. Remove the trim from existing housing.



4. Install the Edison socket adapter into the recessed housing socket. For California Title-24 compliance, cut off and remove the socket and adapter. Then, splice the LED retrofit trim leads to the luminaire leads. Simply connect the EZ connectors



6. Install torsion spring in housing (5" and 6" models) and push LED retrofit trim up to the ceiling.

